



FUEL INJECTOR & INJECTOR HOLDER

FAMILY CODE: **31584**

The injector holder sends fuel into the cylinders.



NON-EMITTED CO₂*: **2,2 kg**



MATERIAL SAVINGS*: **0,27 kg**

*Source: Life-Cycle Assessment (LCA) Europe.
Based on a European study Material savings and non-emitted CO₂ on average compared with the new equivalent MOPAR genuine part. Values are given for information only, corresponding to the main seller of the similar products and determined according to a methodology approved by an independent company (Sphera methodology).



REMANUFACTURING STEPS

- Full cleaning
- Systematic replacement of wear parts: needle, inlet butterfly valve, solenoid valve
- Check dimensional tolerance and measurement of all components
- Leak and performance test



MAINTENANCE & REPAIR GUIDELINES

The injector holder must be replaced when the vehicle has difficulty starting:

- Unstable idling
- A smell of diesel
- A loss of power



ADDITIONAL CHECKPOINTS

- Supply network
- Other injectors (if the unit is changed)
- Injection pump
- Diesel filter

EE SA NA

