



SUSPENSION AIR COMPRESSOR

FAMILY CODE: **30254**

The suspension air compressor works in a similar way to a bicycle pump. It sends pressurized air to the shock absorbers.

 **NON-EMITTED CO₂*:** *under investigation*

 **MATERIAL SAVINGS*:** *under investigation*

*Source: Life-Cycle Assessment (LCA) Europe.
Based on a European study Material savings and non-emitted CO₂ on average compared with the new equivalent MOPAR genuine part. Values are given for information only, corresponding to the main seller of the similar products and determined according to a methodology approved by an independent company (Sphera methodology).



REMANUFACTURING STEPS

- Full cleaning
- Systematic replacement of moving parts: pistons, bearing axis, seals, etc.



MAINTENANCE & REPAIR GUIDELINES

The suspension air compressor must be replaced when the vehicle:

- No longer has rear suspension
- Is pressed onto its rear shock absorbers during a prolonged stop



ADDITIONAL CHECKPOINTS

- Rear pneumatic springs
- Electrical harness connectors

EE SA NA

