



CLUTCH KIT + DUAL MASS FLYWHEEL

FAMILY CODE: **20204**

In addition to the double engine flywheel, the clutch is used to engage gears. It is the intermediary part between the engine and the gearbox.



NON-EMITTED CO₂*: *under investigation*



MATERIAL SAVINGS*: *under investigation*

*Source: Life-Cycle Assessment (LCA) Europe. Based on a European study Material savings and non-emitted CO₂ on average compared with the new equivalent MOPAR genuine part. Values are given for information only, corresponding to the main seller of the similar products and determined according to a methodology approved by an independent company (Sphera methodology).



REMANUFACTURING STEPS

- Resurface the engine flywheel contact area
- Change the clutch friction system
- Change the clutch bearing
- Full dismantling of components
- Component checks (dimensions and functions)
- Clean and recondition all parts to their original condition
- Replace damaged or worn parts with new components



MAINTENANCE & REPAIR GUIDELINES

Must be replaced when:

- The clutch pedal is stiff
- Changing gear is difficult
- The clutch slips



ADDITIONAL CHECKPOINTS

- Gearbox oil
- Clutch master and slave cylinders
- Steering rods
- Driveshaft

EE SA NA

