



PARTICLE FILTER PIPE (DPF)

FAMILY CODE: **20304**

The particle filter is an emission control device that retains fine exhaust particles.



NON-EMITTED CO₂*: **15,3 kg**



MATERIAL SAVINGS*: **8,31 kg**

*Source: Life-Cycle Assessment (LCA) Europe. Based on a European study Material savings and non-emitted CO₂ on average compared with the new equivalent MOPAR genuine part. Values are given for information only, corresponding to the main seller of the similar products and determined according to a methodology approved by an independent company (Sphera methodology).



REMANUFACTURING STEPS

- Full cleaning at high temperature ensuring the same CO₂ performance as the genuine part



MAINTENANCE & REPAIR GUIDELINES

The particle filter must be replaced when:

- The exhaust pipe is hanging low
- The noise from the exhaust is abnormally intensified during acceleration
- A message is displayed on the dashboard indicating an emission control fault



ADDITIONAL CHECKPOINTS

- Exhaust line rubber bushing
- Exhaust silencer and pipe
- Particle filter regeneration fluid

